FENDER "BASSMAN" SCHEMATIC
MODEL 5F6-A

I-EG

NOTICE
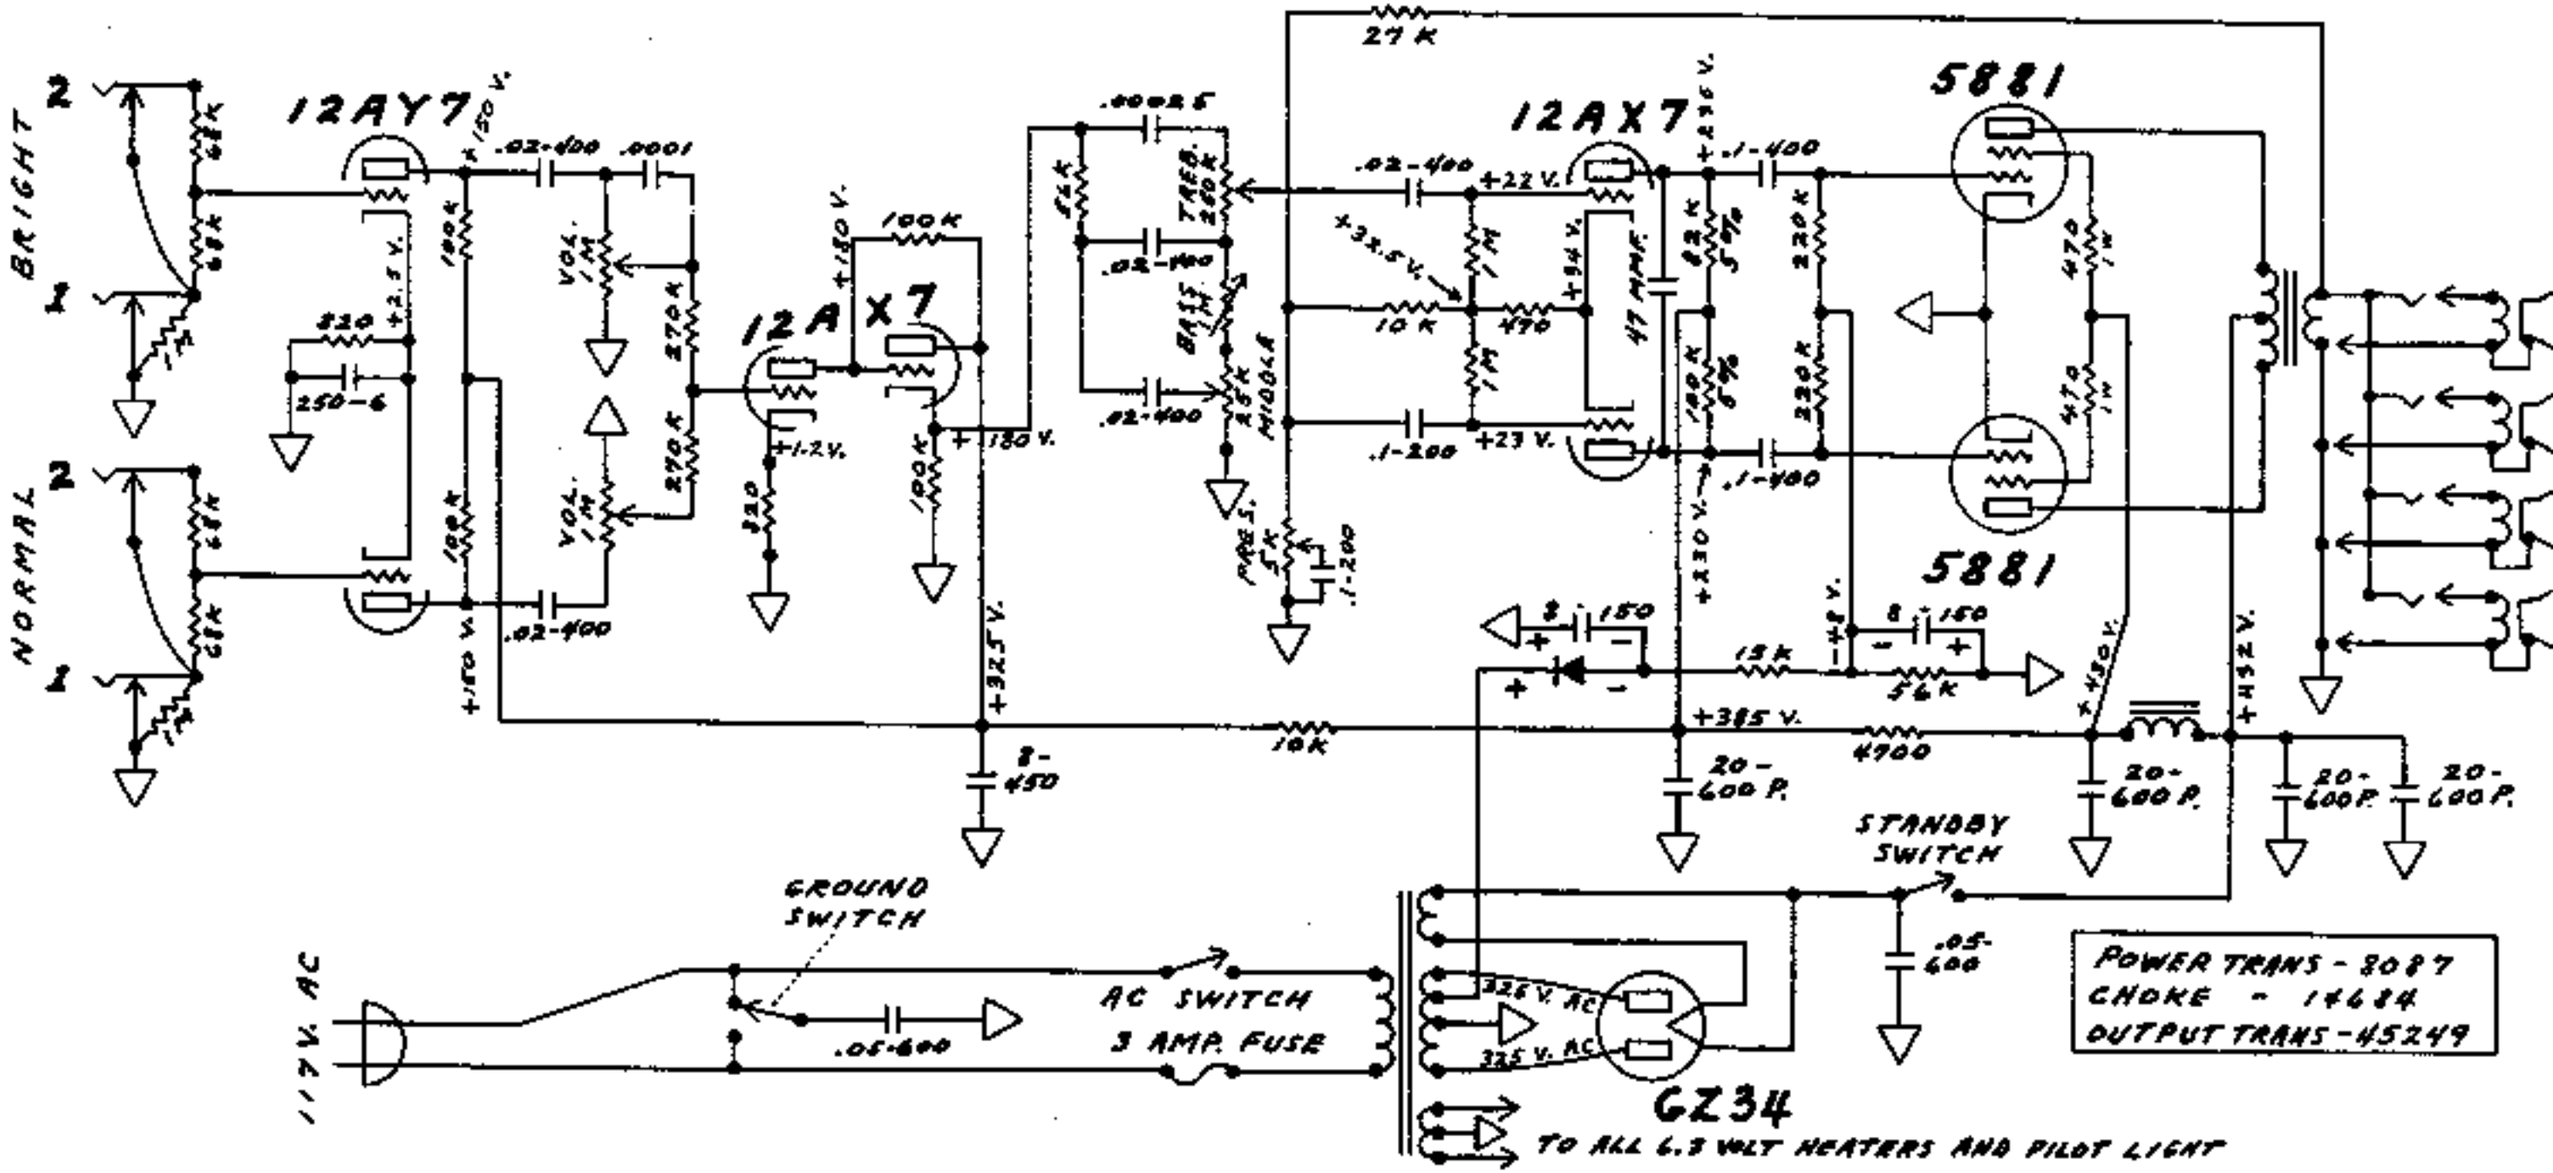
VOLTAGES READ TO GROUND
WITH ELECTRONIC VOLTMETER
VALUES SHOWN + OR − 20%